


**Key
NO.**
Parts No.
Parts name

1	2F5-097-02	HANDLE NUT CAP
2	2E3-016-01	NUT
3	2YH-084-02	HANDLE TOTAL ASSEMBLY
4	2E2-030-02	F20M-050 SCREW
5	2E4-018-01	RETAINER
6	2F8-050-01	CLICK LEAF SPRING HOLDER
7	2L3-029-01	CLICK LEAF SPRING
8	2D4-008-03	STAR DRAG LEVER
9	2Q1-052-01	STAR DRAG SPRING
10	2E3-029-01	STAR DRAG NUT
11	2L1-004-01	SPRING WASHER
12	2W1-035-05	080-105 WASHER
13	2Z1-024-06	812-2.5 BALL BEARING
14	2A4-022-01	ONE-WAY CLUTCH INNER TUBE
15	2E3-024-01	CAST CONTROL NUT
16	2W5-026-01	SPACER
17	2W5-029-01	CAST CONTROL SPACER
18	2E4-019-01	BEARING RETAINER
19	2C2-003-01	LINE ROLLER BUSH
20	2E9-005-01	O RING
21	2E0-067-01	LEFT SIDE COVER SCREW
22	2W1-132-01	036-060 WASHER
23	2YF-195-01	RIGHT SIDE COVER ASSEMBLY
24	2E5-006-01	E2.5 RETAINER
25	2E9-061-01	OIL RESISTANCE O RING
26	2I6-012-01	SOFT PLATE
27	2YF-085-04	COUNTER ASSEMBLY
28	2E2-095-01	B26M-050 SCREW
29	2E2-092-01	B20M-050 SCREW
30	2F5-543-01	DUST COVER
31	2E2-026-01	A20M-075 SCREW
32	2YZ-007-01	ONE-WAY CLUTCH BEARING ASSEMBLY
33	2E4-008-01	DRAG WASHER RETAINER
34	2W2-032-01	KEY WASHER
35	2W1-126-02	082-210 WASHER
36	2W3-017-01	EARED WASHER
37	2W2-025-01	KEY WASHER
38	2W1-111-02	100-230 WASHER
39	2G1-027-01	DRIVE GEAR
40	2YG-023-02	OSCILLATING GEAR ASSEMBLY
41	2A3-027-01	RATCHET
42	2M3-048-01	DRIVE SHAFT
43	2Z1-018-06	510-3 BALL BEARING
44	2G2-010-01	PINION GEAR
45	2Q1-031-01	YOKE SPRING
46	2A2-039-01	PINION YOKE
47	2E1-050-01	A20-060 SCREW
48	2F8-030-01	CLUTCH CAM RETAINER
49	2YA-042-01	CLUTCH CAM ASSEMBLY
50	2Z2-021-01	BUSHING

**Key
NO.**
Parts No.
Parts name

51	2M2-002-01	CLUTCH PLATE
52	2G3-109-01	COUNTER GEAR A
53	2Q3-086-01	RETRACTOR SPRING
54	2F8-153-01	GEAR SETTING PLATE
55	2E2-005-03	B26M-080 SCREW
56	2W1-054-01	052-080 WASHER
57	2W1-070-01	052-080 WASHER
58	2E5-013-01	E3.0 RETAINER
59	2YS-282-03	SPOOL ASSEMBLY
60	2C2-057-01	BRAKE COLLAR
61	2Z1-023-05	814-4 BALL BEARING
62	2W1-070-01	052-080 WASHER
63	2F3-041-01	CLICK GEAR
64	2G3-023-02	IDLE GEAR
65	2M4-043-01	WORM SHAFT
66	2C2-133-01	WORM SHAFT BUSHING
67	2C4-007-01	LEVEL WIND GUARD
68	2YR-038-01	LINE GUIDE ASSEMBLY
69	2M5-005-01	LINE GUIDE PIN
70	2W1-100-01	020-068 WASHER
71	2E3-014-01	LINE GUIDE NUT
72	2E1-066-01	A20-100 SCREW
73	2YB-089-61	BODY ASSEMBLY
74	2G3-088-01	IDLE GEAR
75	2W1-166-02	031-102 WASHER
76	2E2-007-01	B30M-100 SCREW
77	2G3-111-01	IDLE GEAR
78	2E2-003-01	B26M-036 SCREW
79	2C2-042-01	WORM SHAFT BUSH
80	2F6-050-01	BEARING HOLDING PLATE
81	2E2-037-01	A26M-060 SCREW
82	2C1-055-01	SPACER
83	2P4-006-01	LEVEL WIND GUIDE
84	2E5-020-01	E1.5 RETAINER
85	2P2-021-01	CASTING BAR PIN
86	2P4-008-01	CASTING BAR SUPPORT
87	2E2-003-01	B26M-036 SCREW
88	2C4-013-02	CASTING BAR GUIDE A
89	2YS-085-03	CASTING BAR ASSEMBLY
90	2C4-014-02	CASTING BAR GUIDE B
91	2E4-011-01	BEARING RETAINER
92	2W5-015-01	CAST CONTROL SPACER
93	2F4-018-01	CLICK PAWL
94	2E1-075-01	B22-045 SCREW
95	2F2-020-01	CLICK SPRING
96	2F6-032-01	CLICK PLATE
97	2F5-541-01	LEFT SIDE COVER
98	2F7-004-01	CLICK SWITCH
KL150LC-M SPECIAL PARTS		
26	2YF-085-05	COUNTER ASSEMBLY