

Key
NO.

Parts No.

Parts name

1	2YD-094-06	DRAG KNOB ASSEMBLY
2	2E4-034-01	DRAG WASHER RETAINER
3	2W2-071-01	KEY WASHER
4	2W1-226-01	080-260 WASHER
5	2W3-035-01	EARED WASHER
6	2YT-443-06	SPOOL TOTAL ASSEMBLY
7	2W2-016-01	KEY WASHER
8	2Z1-029-07	408-3 BALL BEARING
9	2C1-119-01	SPACER
10	2W1-237-01	070-225 WASHER
11	2L3-015-01	CLICK LEAF SPRING
12	2M3-151-01	MAIN SHAFT
13	2F8-019-02	CLICK LEAF SPRING HOLDER
14	2W2-015-01	KEY WASHER
15	2E3-002-01	ROTOR NUT
16	2E1-036-01	B26-040 SCREW
17	2R1-146-06	ROTOR
18	2R4-203-01	BAIL TRIP COVER
19	2E1-065-01	B22-065 SCREW
20	2E2-094-01	B30M-090 SCREW
21	2R2-070-06	BAIL ARM
22	2E1-010-01	b30-100 SCREW
23	2W1-258-01	030-060 WASHER
24	2Z1-012-07	407-2.5 BALL BEARING
25	2R6-020-02	LINE ROLLER
26	2YL-158-06	BAIL ASSEMBLY
27	2Q1-051-02	BAIL SPRING
28	2R5-179-01	BAIL TRIP LEVER
29	2R4-202-01	BAIL SPRING COVER

Key
NO.

Parts No.

30	2E1-050-01	A20-060 SCREW
31	2F5-436-01	ROLLER CLUTCH RETAINER
32	2Q2-021-01	SPRING
33	2YZ-027-01	ONE-WAY CLUTCH BEARING ASSEMBLY
34	2A4-082-01	ONE-WAY CLUTCH INNER TUBE
35	2Z1-005-07	816-5 BALL BEARING
36	2G2-165-01	PINION GEAR
37	2E1-051-01	D30-080 SCREW
38	2B1-173-05	BODY
39	2Z1-009-07	711-3 BALL BEARING
40	2G1-150-01	DRIVE GEAR
41	2W1-019-01	071-103 WASHER
42	2Z1-023-07	814-4 BALL BEARING
43	2M2-016-01	OSCILLATING CAM
44	2G3-081-01	OSCILLATING GEAR
45	2M1-074-01	OSCILLATING SLIDER
46	2E2-009-01	F23M-060 SCREW
47	2B2-126-06	BODY COVER
48	2E1-055-01	A26-100 SCREW
49	2YH-399-01	HANDLE TOTAL ASSEMBLY
50	2C3-042-01	HANDLE SCREW SLEEVE
51	2H6-001-13	HANDLE SCREW CAP
52	2A2-106-06	ANTI-REVERSE CAM
53	2L5-010-01	ANTI-REVERSE CAM SPRING
54	2F5-475-01	REAR COVER
55	2E1-070-02	B22-055 SCREW
LZ3500	SPECIAL PARTS	
6	2YT-459-06	SPOOL TOTAL ASSEMBLY