



Key NO.	Parts No.	Parts name	Key NO.	Parts No.	Parts name
1	2YD-017-07	DRAG KNOB ASSEMBLY	27	2E1-020-02	B22-055 SCREW
2	2E4-008-01	DRAG WASHER RETAINER	28	2E1-010-01	b30-100 SCREW
3	2W2-042-01	KEY WASHER	29	2A4-053-01	ANTI-REVERSE PAWL
4	2W1-159-01	045-152 WASHER	30	2Q3-043-01	ANTI-REVERSE PAWL SPRING
5	2YS-299-01	SPOOL ASSEMBLY	31	2Q3-017-01	ANTI-REVERSE PAWL SPRING
6	2Q2-003-01	CLICK PAWL SPRING	32	2C3-080-01	ANTI-REVERSE PAWL SPRING COLLAR
7	2E5-006-01	E2.5 RETAINER	33	2E1-019-01	D26-060 SCREW
8	2F4-004-01	CLICK PAWL	34	2Z1-006-07	613-3.5 BALL BEARING
9	2W1-051-02	033-065 WASHER	35	2G2-196-01	PINION GEAR
10	2F3-051-01	CLICK GEAR	36	2B1-222-01	BODY
11	2E3-001-02	ROTOR NUT	37	2L5-010-01	ANTI-REVERSE CAM SPRING
12	2E1-056-01	B20-035 SCREW	38	2A1-031-02	ANTI-REVERSE LEVER
13	2R1-181-01	ROTOR	39	2H6-001-11	HANDLE SCREW CAP
14	2E2-018-01	B30M-080 SCREW	40	2C3-042-01	HANDLE SCREW SLEEVE
15	2R2-092-01	BAIL ARM	41	2E2-030-02	F20M-050 SCREW
16	2E1-025-01	b30-080 SCREW	42	2M3-184-01	MAIN SHAFT
17	2C1-056-01	LINE ROLLER COLLAR	43	2M1-087-01	OSCILLATING SILDER
18	2Z1-012-07	407-2.5 BALL BEARING	44	2G3-104-01	OSCILLATING GEAR
19	2R6-012-02	LINE ROLLER	45	2Z1-011-07	711-2.5 BALL BEARING
20	2C2-032-01	LINE ROLLER BUSH	46	2G1-165-01	DRIVE GEAR
21	2YL-212-01	BAIL ASSEMBLY	47	2W1-019-01	071-103 WASHER
22	2R5-224-01	BAIL PAWL	48	2Z1-011-07	711-2.5 BALL BEARING
23	2R5-202-01	BAIL TRIP SHAFT	49	2B2-159-01	BODY COVER
24	2W1-044-01	016-035 WASHER	50	2E1-055-01	A26-100 SCREW
25	2Q1-141-01	BAIL SPRING	51	2YH-515-01	HANDLE TOTAL ASSEMBLY
26	2R4-250-01	BAIL SPRING COVER			