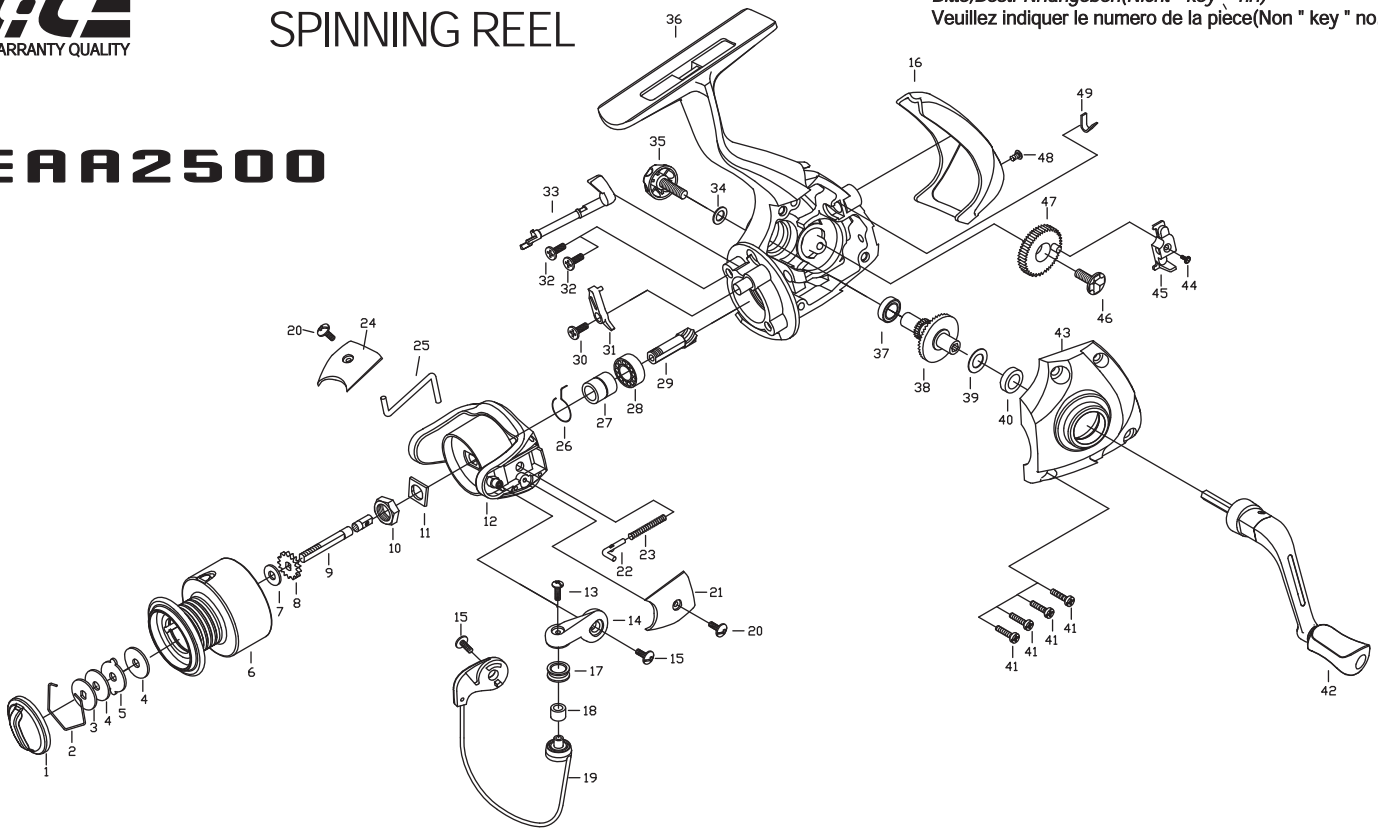


SPINNING REEL

Please order by parts number, not key number
 Bitte, Best.-Nr. angeben (Nicht "key" -nr.)
 Veuillez indiquer le numero de la piece (Non "key" no.)

EAA2500

KEY NO.	Parts No.	Parts name	KEY NO.	Parts No.	Parts name
1	022-AX1-01	DRAG KNOB ASSY.	26	022-AX1-26	ANTI-REVERSE BUTTON SPRING
2	022-AX1-02	SIX CORNER SPRING	27	022-AX1-27	BUSHING
3	022-AX1-03	KEY WASHER	28	022-AX1-28	BALL BEARING (071605)
4	022-AX1-04	DRAG WASHER	29	022-AX1-29	PINION GEAR
5	022-AX1-05	EAR WASEHR	30	022-AX1-30	ANTI-REVERSE PAWL SCREW
6	022-AX1-06	SPOOL ASSY.	31	022-AX1-31	ANTI-REVERSE PAWL
7	022-AX1-07	CLICK GEAR WASHER	32	022-AX1-32	BALL BEARING SCREW
8	022-AX1-08	CLICK GEAR WASHER	33	022-AX1-33	ANTI-REVERSE LEVEL
9	022-AX1-09	MAIN SHAFT	34	022-AX1-34	DUST COVER
10	022-AX1-10	ROTOR NUT	35	022-AX1-35	DUST COVER BUSHING
11	022-AX1-11	WASHER	36	022-AX1-36	MAIN BODY
12	022-AX1-12	ROTOR	37	022-AX1-37	BUSHING
13	022-AX1-13	LINE ROLLER SCREW	38	022-AX1-38	DRIVE GEAR
14	022-AX1-14	BAIL ARM	39	022-AX1-39	DRIVE GEAR WASHER
15	022-AX1-15	BAIL ASSY. SCREW	40	022-AX1-40	BUSHING
16	022-AX1-16	MAIN BODY COVER	41	022-AX1-41	SIDE PLATE SCREW
17	022-AX1-17	LINE ROLLER	42	022-AX1-42	HANDLE ASSY
18	022-AX1-18	BUSHING	43	022-AX1-43	SIDE PLATE
19	022-AX1-19	BAIL ASSY.	44	022-AX1-44	OSCILLATION SLIDER SCREW
20	022-AX1-20	ROTOR COVER SCREW	45	022-AX1-45	OSCILLATION SLIDER
21	022-AX1-21	SCREW	46	022-AX1-46	BALL BEARING SCREW
22	022-AX1-22	COMPRESSION SPRING	47	022-AX1-47	TRANSMISSION GEAR
23	022-AX1-23	BAIL ARM YORK	48	022-AX1-48	BODY COVER B SCREW
24	022-AX1-24	ROTOR COVER	49	022-AX1-49	ANTI-REVERSE SPRING
25	022-AX1-25	CLICK LEVEL			