


SPINNING REEL

Please order by parts number, not key number
Bitte, Best.-Nr. angeben (Nicht "key" -nr.)
Veuillez indiquer le numero de la piece (Non "key" no.)

LAA2500

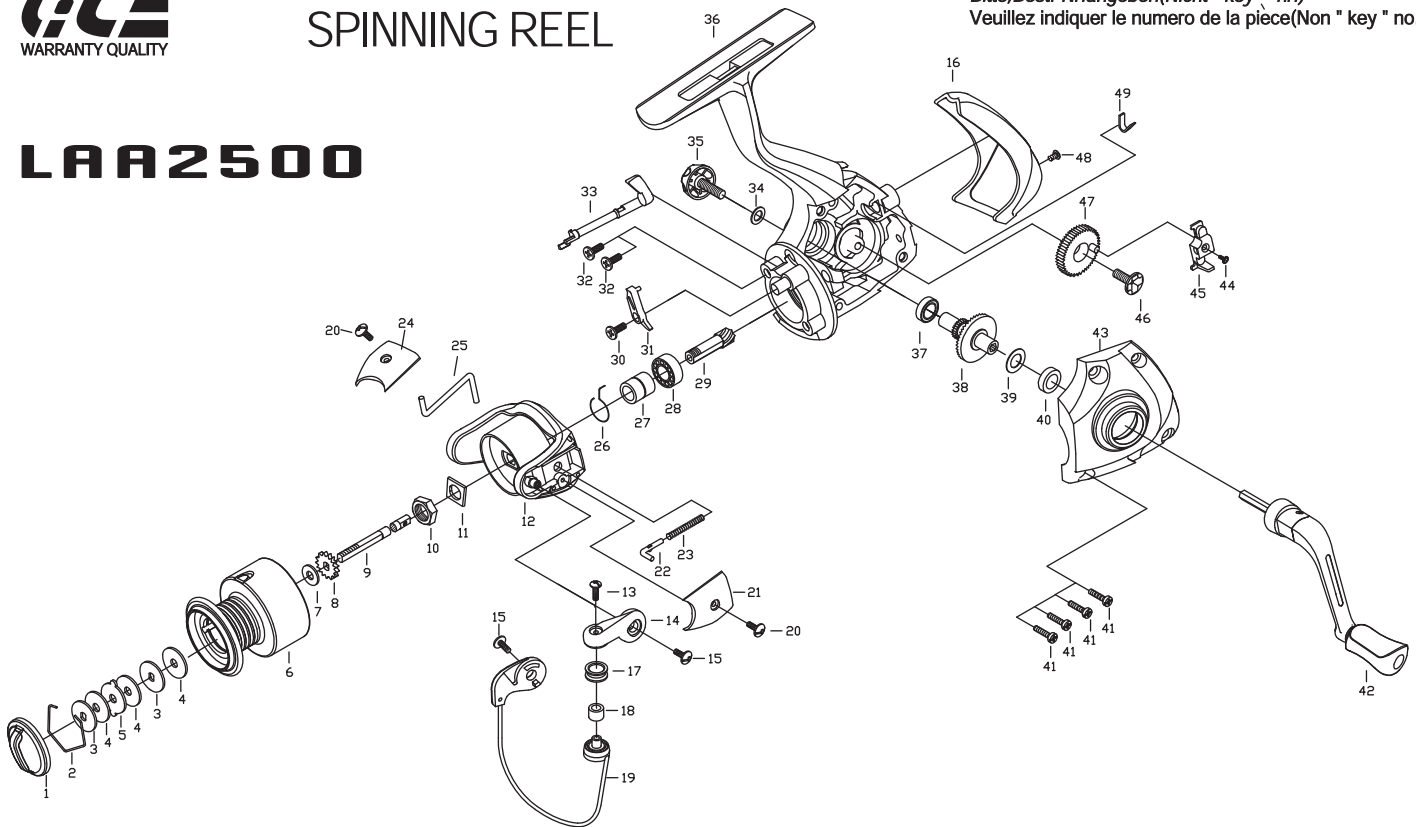

KEY NO.	Parts No.	Parts name	KEY NO.	Parts No.	Parts name
1	022-BX1-01	DRAG KNOB ASSY.	26	022-BX1-26	ANTI-REVERSE BUTTON SPRING
2	022-BX1-02	SIX CORNER SPRING	27	022-BX1-27	BUSHING
3	022-BX1-03	KEY WASHER	28	022-BX1-28	BALL BEARING (071605)
4	022-BX1-04	DRAG WASHER	29	022-BX1-29	PINION GEAR
5	022-BX1-05	EAR WASEHR	30	022-BX1-30	ANTI-REVERSE PAWL SCREW
6	022-BX1-06	SPOOL ASSY.	31	022-BX1-31	ANTI-REVERSE PAWL
7	022-BX1-07	CLICK GEAR WASHER	32	022-BX1-32	BALL BEARING SCREW
8	022-BX1-08	CLICK GEAR WASHER	33	022-BX1-33	ANTI-REVERSE LEVEL
9	022-BX1-09	MAIN SHAFT	34	022-BX1-34	DUST COVER
10	022-BX1-10	ROTOR NUT	35	022-BX1-35	DUST COVER BUSHING
11	022-BX1-11	WASHER	36	022-BX1-36	MAIN BODY
12	022-BX1-12	ROTOR	37	022-BX1-37	BALL BEARING(07143.5)
13	022-BX1-13	LINE ROLLER SCREW	38	022-BX1-38	DRIVE GEAR
14	022-BX1-14	BAIL ARM	39	022-BX1-39	DRIVE GEAR WASHER
15	022-BX1-15	BAIL ASSY. SCREW	40	022-BX1-40	BALL BEARING(071404)
16	022-BX1-16	MAIN BODY COVER	41	022-BX1-41	SIDE PLATE SCREW
17	022-BX1-17	LINE ROLLER	42	022-BX1-42	HANDLE ASSY
18	022-BX1-18	BALL BEARING	43	022-BX1-43	SIDE PLATE
19	022-BX1-19	BAIL ASSY.	44	022-BX1-44	OSCILLATION SLIDER SCREW
20	022-BX1-20	ROTOR COVER SCREW	45	022-BX1-45	OSCILLATION SLIDER
21	022-BX1-21	SCREW	46	022-BX1-46	BALL BEARING SCREW
22	022-BX1-22	COMPRESSION SPRING	47	022-BX1-47	TRANSMISSION GEAR
23	022-BX1-23	BAIL ARM YORK	48	022-BX1-48	BODY COVER B SCREW
24	022-BX1-24	ROTOR COVER	49	022-BX1-49	ANTI-REVERSE SPRING
25	022-BX1-25	CLICK LEVEL			